

Polaris Runway End HI





Airport Heliport

Compliance to standards	ICAO: International Civil Aviation Organization, Airports, Annex 14, Vol. 1 IEC TS 61827: Electrical installations for the lighting and signaling of aerodromes. Characteristics of recessed and raised luminaires used at aerodromes and heliports.
Application	Elevated Directional RED LED lights indicating the END of the Airport runway. High intensity lights, according ICAO. The POLARIS design has been done in such way as to provide maximum safety. It is a reliable and flexible product, being easy to fit into any kind of infrastructure.
Features	Designed and built with simplicity and ease of maintenance in mind. High power LED technology (100 000 hrs lifespan). IRLED - optional. Lightweight, low-energy and environment friendly lighting fitting. Lead Acid battery Operating modes: Steady with brightness control 1%, 3%, 10%, 30% and 100% Local/manual control Battery status LEDs Optional: working only during the night with photocell control Optional: Radio control one or two way Optional: GPS incorporated Optional: Activated by ARCAL – pilot activation





	AL-163-02-RE		
Product Code	Series Indicator (Airfield Lig Product Indicator LEDs Number LEDs Light Color (RED)	hting)	AL 163 02 RE
	Optional: IR LED Example of ordering codes AL-163-02-RE AL-163-03-RE-IR (when IR	: is included the number of LEDs a	IR are 3)
Description	Dispenser – hardened glas Cable gland - nickel platec Fasteners - stainless steel		ow)
Environment	Temperature range: Degree of protection: Humidity:	- 55° to +55° IP 68 0-100%	
Mounting	The device can be installed or on a frangible support +	l directly on the ground, on a frar solar panel.	ngible support






	Power consumption: maximum 3,5W powered at 100% brightness				
- 1	Power supply: Power supply is provided by rechargeable Lead Acid				
Electrical Characteristics	battery 12V - 12 Ah				
	Solar panel: minimum 20W, optional 30 or 40W				
	Autonomy under ideal conditions (new battery, fully charged at 100%, external temperature of 20° Celsius				
	Brightness level: 100% - 41hrs				
	30% - 130hrs 10% - 410hrs				
	3% - 1300hrs 1% - 4100hrs				
	1/0 110				
	The charging can be done individually or for multiple lamps				
	simultaneously.				
Charging	1) Individually:				
	Cable charger	Drop-in charger	Solar panel		
	-				
	Ch. D	se se			
	i i i	:			
		• • • •			
			•		
	2) Multiple lamps:				
	Drop-in Charging rack	F	Power supply cables		
	(5/10/15/20 lamps)		(6/10 lamps)		
		9	49 994		
	the second second				



Local/manual Control

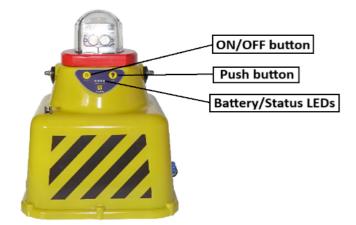

After mechanical installation is done, push the ON/OFF button. This will connect the battery and the POLARIS unit will be powered. As long as the unit is powered the yellow LED from the SIGNALIGHT LOGO will flash every 5 secons. In this moment the lights are in STANDBY mode.

To start the MAIN LEDs push the "Light button". At the first push the battery level will be indicated with the signal LEDs:

- First LED ON means the battery is between 0 to 25 % charged
- First two LEDs ON means the battery is between 25 to 50 % charged
- Three LEDs ON means the battery is between 50 to 75 % charged
- All four LEDs ON means the battery is between 75 to 100 % charged

The battery level indication expire in about 10 seconds and the status LEDs will turn OFF.

If the "Light button" will be pushed again MAIN LEDs will turn ON at 1%, after another push will go to 3%, than to 10%, 30% and 100%. After another push the light will turn OFF and the POLARIS unit will go in STANDBY.

Disconnecting the battery

If the "Light button" is pressed for longer than 3 seconds the battery will be disconnected. This operation is recommended if the lamps are going to be stored for a longer period of time or during transport. In this stage the consumption is zero. When the Polaris is disconnected, the main LEDs will flash for 3 times.



Control of the lamps can be done locally using the buttons on the control panel of the lamps or via the control application.

LOCAL CONTROL

All lamps have a control panel that includes two buttons and four signaling LEDs. Additionally, there is an orange LED in the middle of the LOGO SIGNALIGHT symbol.



After installation, pressing the On/Off button closes the power circuit between the battery and the lamp.

After pressing the button, the first LED of the battery status will light up:



At this moment, the lamp requests access to the system. After a few seconds, the lamp receives access to the system, at which point the third LED will light up:





 
Airport Heliport

Battery

From this moment on, the lamp can also be controlled via the application. Locally, the Light button can be pressed. Upon the first press, the battery level can be viewed: Battery Battery Battery

Signalight

Radio control



On the second press, the lamp turns on at 1%. With another press, it turns on at 3%, then at 10%, then at 30%, and finally at 100%. If pressed again, the lamp turns off.

If the "Light button" is held down for more than 5 seconds, the lamp will flash three times and then turn off (disconnecting the power from the battery).

To restart it, the On/Off button must be pressed.

Optional the POLARIS lights can be radio controlled.

Radio control is made using LORA technology in 868 Mhz for Europe or 915 Mhz for US, optional 433 Mhz.

The lights can be controlled one way using a handled remote control.






One way communications means all the lights can be started at 1%, 3%, 10%, 30% or 100% or switched OFF.

Optionally, the lamps can be controlled in groups, pre-set at the factory through a customized remote control

Another option is to control the lights using a base station, in this case the comunication is bidirectional via POLARIS application.

The distance covered can be up to 10 km in line of sight.

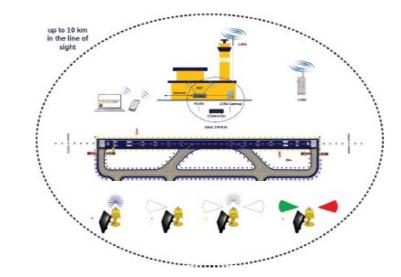

From the POLARIS application the control is more complex. The lights can be controlled individual, in groups, on scenarious and the user can see all the parameters of the lights.


ARCAL – Pilot activation




This option allows pilots to activate the lights using the communication system. If you click three times on the microphone, the lamps will work at 10%, after five clicks, the lamps will work at 30% of intensity, and after 7 clicks, the lamps will work at 100%.



Airport Heliport

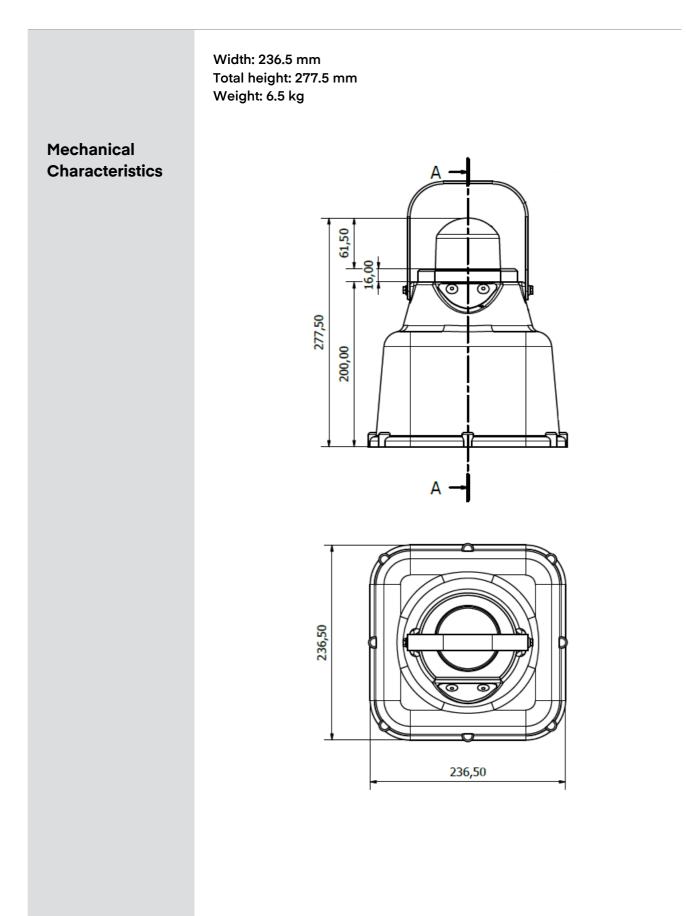




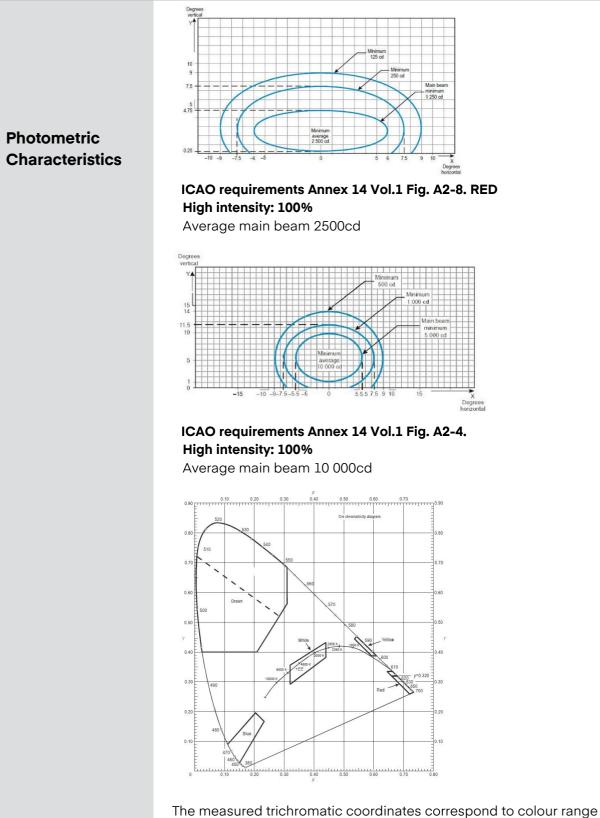

The measured trichromatic coordinates correspond to colour range requirements in:

ICAO Annex 14 – Aerodromes Vol.1, ig, A1-1b. Colours for aeronautical ground lights (solid state lighting)



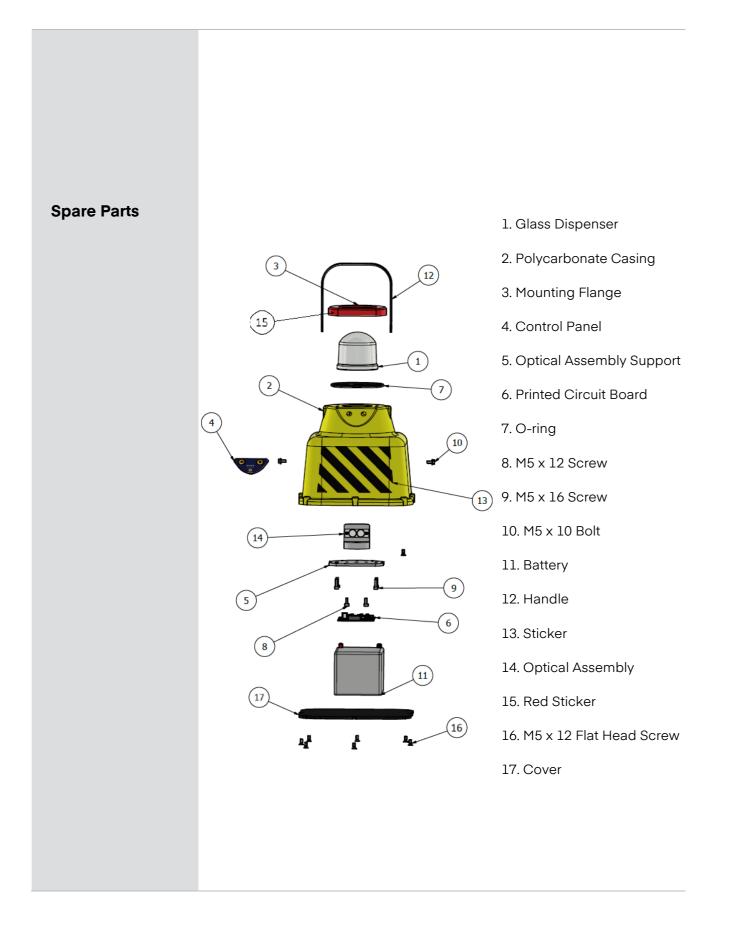



To order accessories please call our customer support. For contact details please refer to our website - www.signalight.com

Accessory



+40 254 515 465 office@signalight.com

36 Lunca Street, Petrosani, Hunedoara County, Romania

www.signalight.com