




Polaris V2 Txiway Heliport





| Compliance to standards | ICAO: International Civil Aviation Organization, Aerodromes, Annex 14, Vol. 2 fig. 5.12 illustration 5. IEC TS 61827: Electrical installations for lighting and beaconing of aerodromes. Characteristics of inset and elevated luminaires used on aerodromes and heliports. | | | | | |
|-------------------------------|---|---|---|--|--|--|
| | Taxiway lights | | | | | |
| Application | ■ | | | | | |
| | F | * * * | × • | | | |
| | Aiming Point LightsTaxiway Lights | FATO LightsTLOF Lights | Floodlights Approach Lights Approach Lights Beacon Light | | | |
| Features | Designed and built with simplicity and ease of maintenance in mind. High power LED technology Lightweight, low-energy and environment friendly lighting fitting. Extensive use of aluminum alloys reduces fitting weight and eases handling in the field. | | | | | |
| Product Code | AL - 083 - 01 - BL Series Indicator (Air Product Indicator LEDs Number LEDs Light Color (E | | AL 083 01 BL | | | |



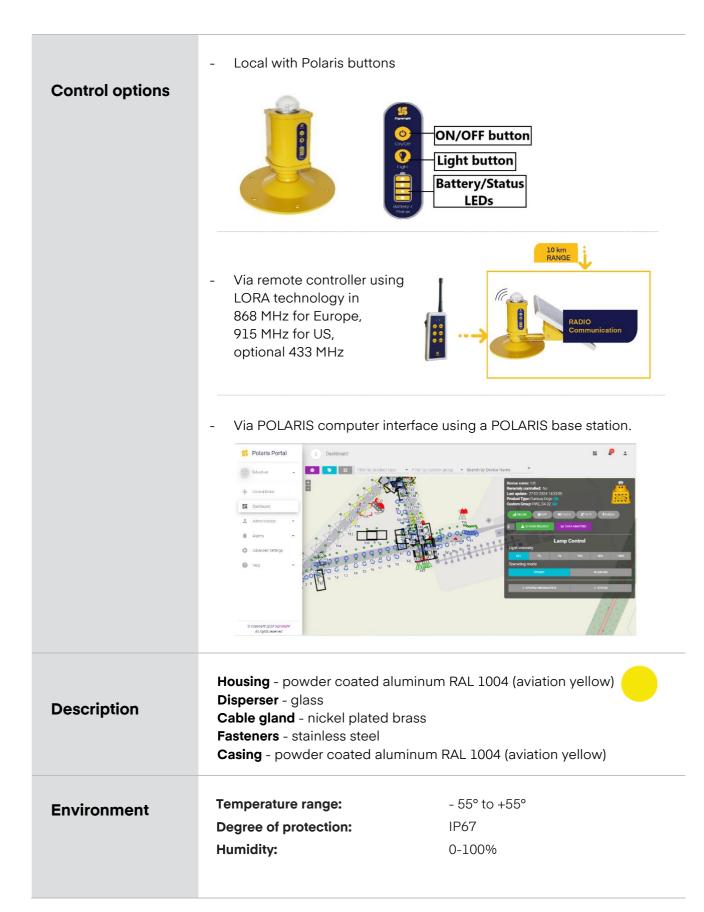




Airport Heliport

| Mounting | On a base plate or tripod | Including Solar panel stand | | | |
|-------------------------------|--|-----------------------------|--|--|--|
| | | | | | |
| Electrical Characteristics | Power consumption: maximum 0,2 W powered at 100% brightness | | | | |
| | Power supply: Power supply is provided by rechargeable NiMh battery 12 V – 2,7 Ah | | | | |
| | Solar panel: 100 W | | | | |
| | Autonomy under ideal conditions (new battery, fully charged at 100%, external temperature of 20° Celsius) Brightness level: 100% - 150hrs 30% - 500hrs 10% - 1500hrs At 1% and 3% intensities, the lamps have an estimated autonomy of at least twice that at 10% intensity, depending on factors such as operating environment, temperature, battery self-discharge, and more. | | | | |
| Charging | Charging can be done using individual chargers for 1/6/10 lamps, racks designed for multiple lamps, or a solar panel. | | | | |
| | Individual charger 1/6/10 | Rack | | | |
| | | | | | |
| | Charging time: 15 hours | Charging time: 15 hours | | | |
| | Solar panel | | | | |
| | | | | | |
| | Charging time: Depending on weather conditions | | | | |



Local/manual Control

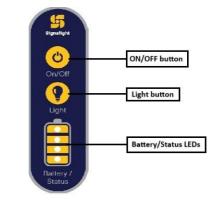

After mechanical installation is done, push the ON/OFF button. This will connect the battery and the POLARIS unit will be powered. As long as the unit is powered the yellow LED from the SIGNALIGHT LOGO will flash every 5 secons. In this moment the lights are in STANDBY mode.

To start the MAIN LEDs push the "Light button". At the first push the battery level will be indicated with the signal LEDs:

- First LED ON means the battery is between 0 to 25 % charged
- First two LEDs ON means the battery is between 25 to 50 % charged
- Three LEDs ON means the battery is between 50 to 75 % charged
- All four LEDs ON means the battery is between 75 to 100 % charged

The battery level indication expire in about 10 seconds and the status LEDs will turn OFF.

If the "Light button" will be pushed again MAIN LEDs will turn ON at 1%, after another push will go to 3%, than to 10%, 30% and 100%. After another push the light will turn OFF and the POLARIS unit will go in STANDBY.

Disconnecting the battery

If the "Light button" is pressed for longer than 3 seconds the battery will be disconnected. This operation is recommended if the lamps are going to be stored for a longer period of time or during transport. In this stage the consumption is zero. When the Polaris is disconnected, the main LEDs will flash for 3 times.

Photocell option function

Optional, the POLARIS lights can work on base of photocell just during the night. In this case the cycle made with the push button is: - battery status, 1 %, 3 %, 10%, 30%, 100%, photocell mode, standby When the photocell mode is selected, the main LEDs will flash for 5 times.



Control of the lamps can be done locally using the buttons on the control panel of the lamps or via the control application.

LOCAL CONTROL

All lamps have a control panel that includes two buttons and four signaling LEDs. Additionally, there is an orange LED in the middle of the LOGO SIGNALIGHT symbol.



After installation, pressing the On/Off button closes the power circuit between the battery and the lamp.

After pressing the button, the first LED of the battery status will light up:





At this moment, the lamp requests access to the system. After a few seconds, the lamp receives access to the system, at which point the third LED will light up:





From this moment on, the lamp can also be controlled via the application. Locally, the "Light button" can be pressed. Upon the first press, the battery level can be viewed:



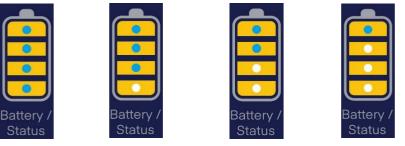

On the second press, the lamp turns on at 1%. With another press, it turns on at 3%, then at 10%, then at 30%, and finally at 100%. If pressed again, the lamp turns off.

If the "Light button" is held down for more than 5 seconds, the lamp will flash three times and then turn off (disconnecting the power from the battery).

To restart it, the On/Off button must be pressed.

Optional the POLARIS lights can be radio controlled.

Radio control is made using LORA technology in 868 Mhz for Europe or 915 Mhz for US, optional 433 Mhz.

The lights can be controlled one way using a handled remote control.



Radio control




One way communications means all the lights can be started at 1%, 3%, 10%, 30% or 100% or switched OFF.

Optionally, the lamps can be controlled in groups, pre-set at the factory through a customized remote control

Another option is to control the lights using a base station, in this case the comunication is bidirectional via POLARIS application.

The distance covered can be up to 10 km in line of sight.

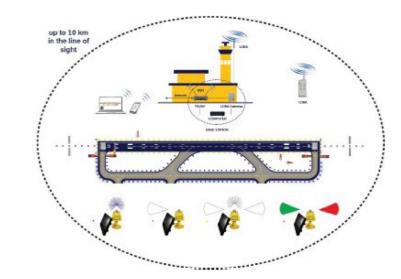

From the POLARIS application the control is more complex. The lights can be controlled individual, in groups, on scenarious and the user can see all the parameters of the lights.


ARCAL – Pilot activation



This option allows pilots to activate the lights using the communication system. If you click three times on the microphone, the lamps will work at 10%, after five clicks, the lamps will work at 30% of intensity, and after 7 clicks, the lamps will work at 100%.



Airport Heliport

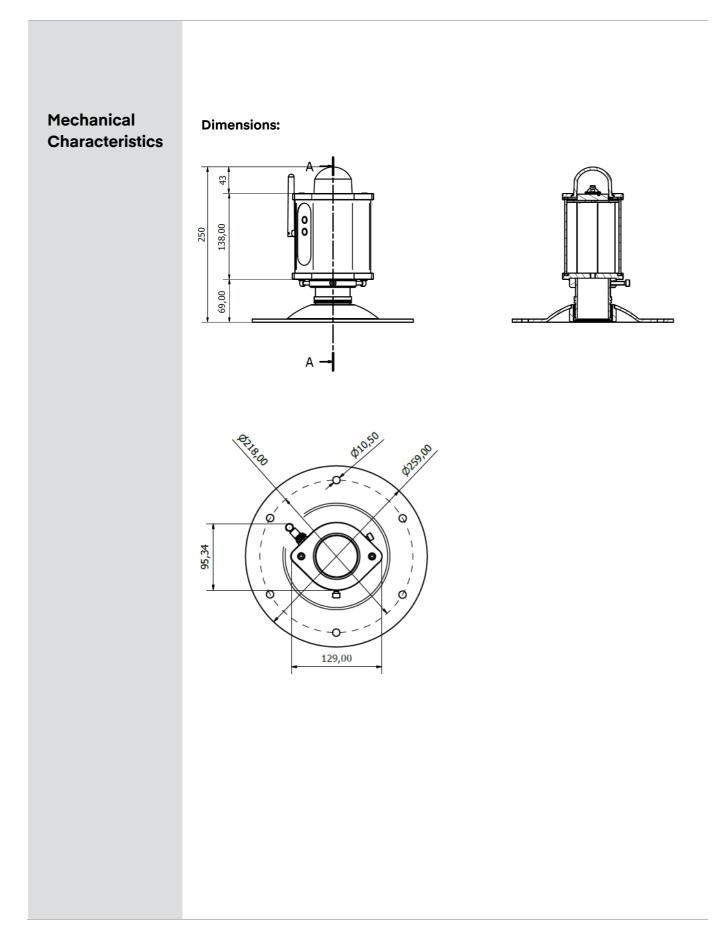




Photometric Characteristics

| Intensity level: | 1%, 3%, 10%, 30%, 100% | | | |
|------------------------------------|-------------------------------|------|--|--|
| Horizontal output: | 360° | | | |
| Light color: | Blue light | | | |
| | | | | |
| Vertical elevation angle: | 0 - 6 | >6 | | |
| Required minimum intensity [cd]: | 2 | 0.2 | | |
| Measured minimum intensity [cd 3.4 | | 11.4 | | |
| 12 | | | | |
| 10 | | | | |
| 8 | | | | |
| 6 | | | | |
| 4 | | | | |
| 2 | | | | |
| 0 0* 6° | | | | |
| ICAO requireme | ent ——Minimum Light Intensity | | | |

The brightness intensity values comply with: ICAO requirements Annex 14 Vol.1 cap.5.3.18.8

The light color emitted by the light fixture is blue, with the trichromatic coordinates:

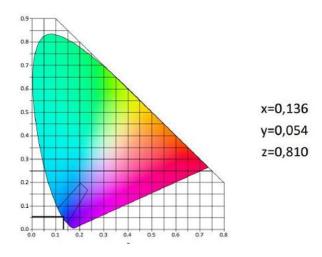


The measured trichromatic coordinates correspond to color range requirements in:

ICAO Annex 14 - Aerodromes Vol.1, fig, A1-1b. Colors for aeronautical ground lights (solid state lighting)



Airport Heliport

Spare Parts

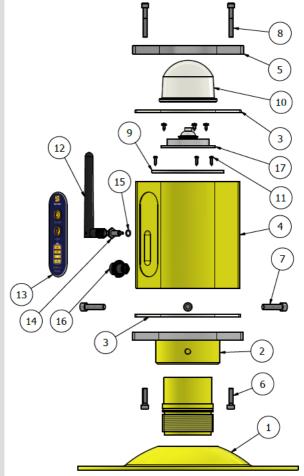

- 1. Frangible Coupling
- 2. Mounting flange
- 3. Silicone Gasket
- 4. Aluminum Body
- 5. Upper Mounting Flange
- 6. M5 x 20 Screws
- 7. M6 x 25 Bolts
- 8. M5 x 35 Screws
- 9. Optical Assembly Support
- 10. Glass Disperser
- 11. 2.2 x9.5 Tapping Screws
- 12. Wi-Fi Antenna
- 13. Membrane Keypad
- 14. SMA Socket
- 15. O-ring
- 16. Weipu Female Socket
- 17. Optical Assembly



+40 254 515 465 office@signalight.com

36 Lunca Street, Petrosani, Hunedoara County, Romania

www.signalight.com